


American Leather Comfort Recliner Battery Installation 2019

01/23/2019 P1

- BATTERY KIT: 173295 - BATTERY KIT-COMFORT RECLINER 2.0**
- (1) 169386 BRACKET-CONTROL BOX MOUNTING-LEFT
- (1) 169387 BRACKET-CONTROL BOX MOUNTING-RIGHT
- (1) 161429 BATTERY 2.0 RV5-RV7 MC160

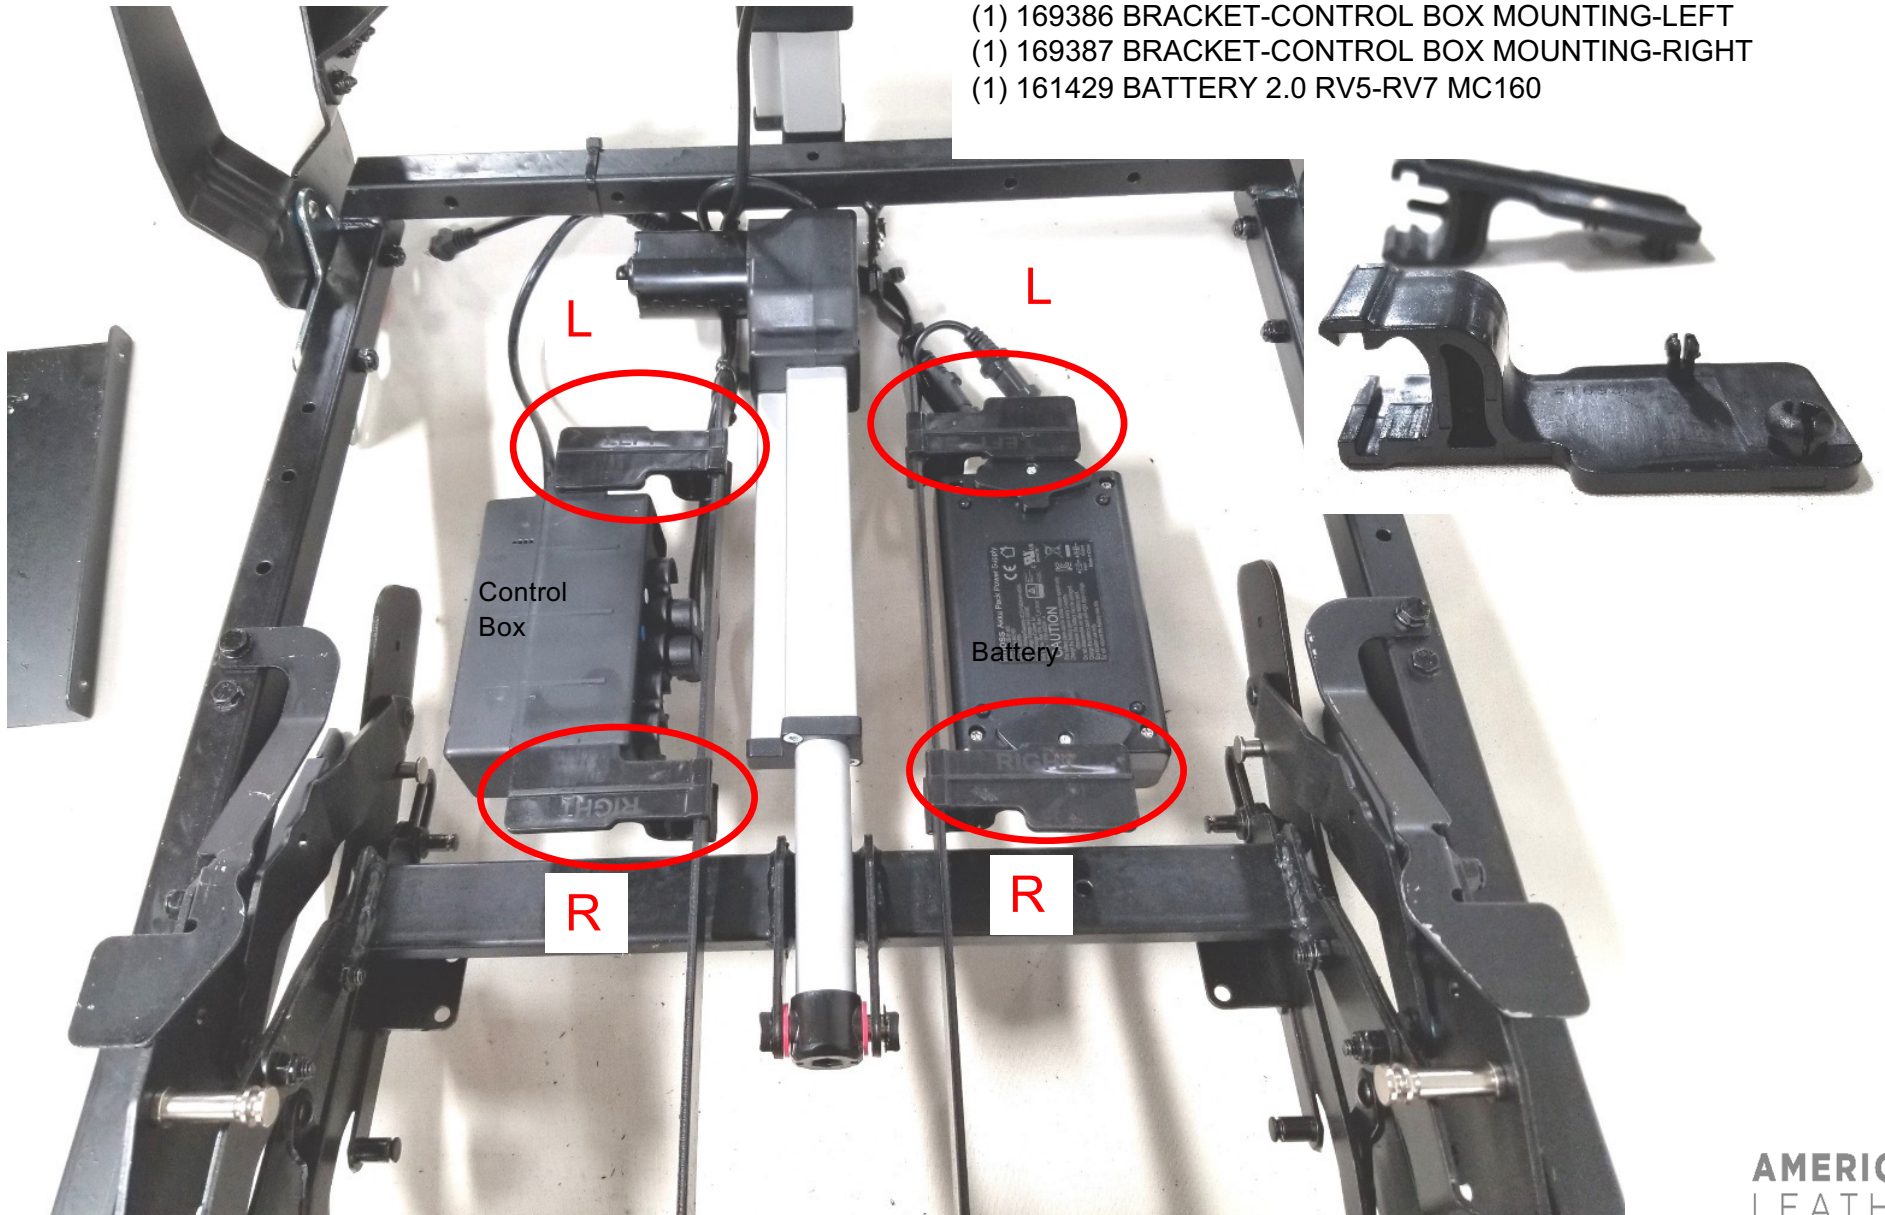

American Leather Comfort Recliner Battery Installation 2019

01/23/2019 P2



Orient Battery bottom with cords on the left. Install **RIGHT Bracket** on the right side and snap the fitting into the battery mounting holes as shown




LEFT and RIGHT Bracket mounted on Battery



Cut Zip Tie from Power Extension Cords as shown



Line up Guide Pin on Right Bracket with hole in Motor Guard Bar. Hook Top Groove onto Bar and swing Battery down to snap in place

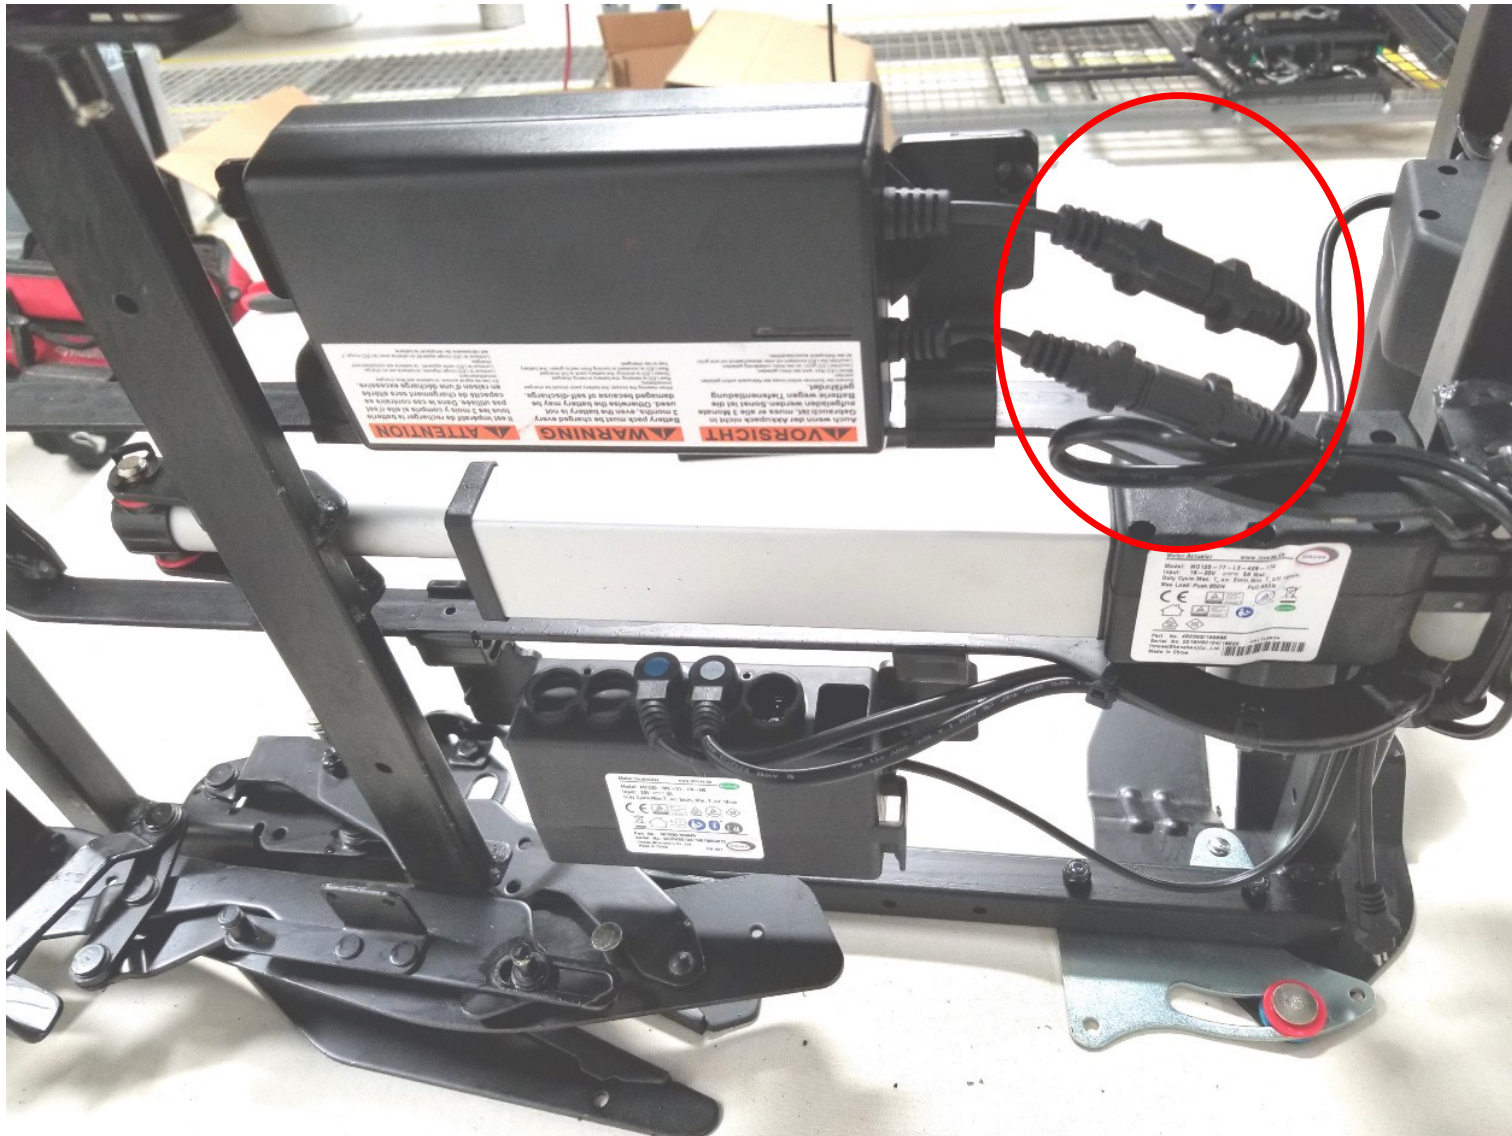

Battery snapped into place and Power Extension Cords plugged into Battery- shown from bottom of mechanism